

Check Your Scanner

TicketCreator uses by default “Code 2 of 5 interleaved” barcodes to print secure tickets, but you can also use “Code 3 of 9” barcodes. Both barcodes are very common and read by most barcode scanners.

Scanner settings:

Your **scanner must be set to send a Return, Enter, Crfr or Cr after each scan** and should send the check sum of Code 2 of 5 interleaved barcodes. Both are default settings for most scanners. Please check the manual of your scanner for details.

Check your scanner:

You can easily check your scanner with Word or any other program:

- 1.) Print this page.
- 2.) Open Word or any other program, which allows you to enter text.
- 3.) Scan the barcodes below.
- 4.) After the scan you should read “6380670420”

Code 2 of 5 interleaved



Result:

“6380670420”	Everything is fine. Your scanner can be used to check tickets.
“638067042”	The last digit is missing because the check sum is not transmitted. The check sum is not necessary for TicketCreator, but recommended. Check the manual of your scanner to see, how to activate transmission of the check sum.
No read	Check the manual of your scanner to see, whether “Code 2 of 5 interleaved” is supported and activated.

Code 3 of 9



Result:

“6380670420”	Everything is fine. Your scanner can be used to check tickets.
No read	Check the manual of your scanner to see, whether “Code 3 of 9” is supported and activated.